

## HOW TO REFUEL WITH LPG – DE VISSER “GUN”

**Start here** →  Remove filler cap on vehicle (twist and pull). Remove gun by pulling out of holster.

**Splashguard removed for clarity**

**1**  Holding handle upright & forwards, line up slots in gun with pins on vehicle filler. Push gun on to filler.

**2**  Rotate handle 60-90° clockwise (angle varies with gun makes).

 slots in gun pins on vehicle filler

**3**  Pull handle back until locked.

**FILL** →  Fill by keeping button pressed. Release when flow stops (tank is full).


**4**  Keeping your hands away from barrel area, release the gun by moving the lever slowly towards vehicle. Some liquid gas is released (this is normal).


**5**  Rotate lever 60-90° anticlockwise to vertical and pull gun from nozzle.


 Replace gun in holster and replace filler cap.

## HOW TO REFUEL WITH LPG – GAS GUARD “GUN”


**Start here** →  Remove filler cap on vehicle (twist and pull). Remove gun by pulling up and out.


**1**  Make sure barrel is rotated fully anticlockwise, then offer gun to filler. Cut-outs on barrel end & pins on nozzle must match.

**2**  Push home and rotate barrel 90° clockwise.


 Check the pin alignment on your car!

**3**  Squeeze red trigger and lock by pulling down catch.

**FILL** →  Fill by keeping button pressed. Release when flow stops (tank is full).

**4**  Squeeze red trigger and release to unlock. Keep your hands away from barrel area, as some liquid gas is released (this is normal).

**5**  Rotate barrel 90° anticlockwise and pull from nozzle.

 Replace gun in holster and replace filler cap.